

<b>CD Players</b>	<b>DAC Chips</b>
ACOUSTIC RESEARCH CD-07	SAA7220 (digital filter)
ACCUPHASE DAC10	2x AD1853
ACCUPHASE DAC20	2x AD1955
ACCUPHASE DC801	8x AD1955
ACCUPHASE DP55V	AD1853
ACCUPHASE DP57	2x PCM1796
ACCUPHASE DP65	8x PCM1702 (4/ch)
ACCUPHASE DP67	4x AD1955
ACCUPHASE DP78	6x AD1955
ACCUPHASE DP85	6x AD1853
ACCUPHASE DP90	PCM63
ACCUPHASE DP500	4x PCM1796
ADC CD 250XR	PCM54
AKAI CD26	TDA1543A
AKAI CD37	PCM67P
AKAI CD55	AD1856
AKAI CD57	PCM67P-J
AKAI CD69	PCM63
AKAI CD73	PCM56
AKAI CD93	PCM56
AKAI CD-M839	PCM56
ALBA CD420	PCM54
ALCHEMIST NEXUS APD32A	2x TDA1549
AMC CD60	PCM1716
AMC CD8A	MN6474 (Technics MASH)
AMC CD8B	PCM1716
ANTHEM CD1	PCM1702
ARCAM ALPHA	TDA1541A
ARCAM ALPHA 5	TDA1541
ARCAM ALPHA 5 PLUS	TDA1541A
ARCAM ALPHA 6	SM5864
ARCAM ALPHA 7	PCM1710
ARCAM ALPHA 7SE	PCM1716
ARCAM ALPHA 8	SM5864AP
ARCAM ALPHA 9	dCS RingDAC
ARCAM ALPHA PLUS	TDA1541A
ARCAM CD72	PCM1716

ARCAM CD92	dCS RingDAC
ARCAM DELTA 70.2	TDA1541A S1 (single crown)
ARCAM DELTA 70.3	SAA7350
ARCAM DELTA 110	2x SAA7321 (1/ch)
ARCAM DELTA 110.2	2x PCM67P-J (Sync Lock)
ARCAM DELTA 270	PCM69
ARCAM DELTA BLACK BOX 1	TDA1541A
ARCAM DELTA BLACK BOX 2	TDA1541A
ARCAM DELTA BLACK BOX 3	4x SAA7321 (2/ch)
ARCAM DELTA BLACK BOX 5	2x PCM67PJ (Sync Lock)
ARYE CX-7	PCM1738
ARYE D-1	PCM1704
AUDIO ALCHEMY ENGINE v3.0	AD1862
AUDIO ANALOGUE MAESTRO	AD1855
AUDIO INNOVATIONS ALTO	PCM1716
AUDIO NOTE CD-1	PCM1710
AUDIO NOTE CD-2	AD1865
AUDIO NOTE DAC-3	PCM63
AUDIO RESEARCH CD1	SAA7341
AUDIOLAB 8000 CD	CS4329
AVI SC2000MC	PCM63
BLAUPUNKT CP2650	PCM54
BLAUPUNKT CP2990	PCM56P
CAMBRIDGE AUDIO CD1	TDA1541
CAMBRIDGE AUDIO CD2	4x TDA1541
CAMBRIDGE AUDIO CD3	TDA1541A
CAMBRIDGE AUDIO CD4SE	CS4327
CAMBRIDGE AUDIO CD6	TDA1305T
CAMBRIDGE AUDIO D500	CS4327
CARVER SD/A 450	MN6474
CARVER TL-3100	LC7881
C.E.C. 530CD2	Y3015
C.E.C. 680CD	LC7881
CONDOR CD950	YM3020
CONSONANCE CD 120	CS4396
COPLAND CDA277	PCM63
COPLAND CDA288	PCM63-K
CREEK CD50 MKII	CS4396
CROWN AVC-9500	AD1864

CROWN CD2111R	LC7881
CYRUS CD7	PCM1716
CYRUS dAD1	TDA1311
CYRUS dAD3	TDA1305
CYRUS dAD3Q	AD1861
CYRUS dAD7	AD1861
DENON DA-500	PCM1702
DENON DCD-435	PCM1716E
DENON DCD-480	PCM61
DENON DCD-485	PCM1735
DENON DCD-500	PCM54
DENON DCD-580	PCM67P
DENON DCD-590	PCM61
DENON DCD-610	1x PCM56P-L (S/H)
DENON DCD-615	PCM61P
DENON DCD-635	PCM61P
DENON DCD-650F	PCM1700P
DENON DCD-655	PCM1702
DENON DCD-660	2x PCM61
DENON DCD-680	PCM69A
DENON DCD-685	PCM1702
DENON DCD-690	PCM61
DENON DCD-695	PCM61
DENON DCD-700	PCM54HP
DENON DCD-725	PCM61P-L
DENON DCD-735	PCM61
DENON DCD-755AR	PCM1702
DENON DCD-800	PCM56
DENON DCD-810	PCM56P
DENON DCD-820	PCM56
DENON DCD-890	PCM61P
DENON DCD-920	PCM61
DENON DCD-980	PCM61P
DENON DCD-1015	PCM61P
DENON DCD-1100	PCM53JP-V
DENON DCD-1400	PCM56
DENON DCD-1420	PCM54HP
DENON DCD-1450AR	PCM1702
DENON DCD-1460	PCM61P

DENON DCD-1500	PCM54HP-K
DENON DCD-1500mk2	PCM56P-J
DENON DCD-1520	PCM64
DENON DCD-1530	PCM61
DENON DCD-1550R	PCM61
DENON DCD-1550AR	PCM61P
DENON DCD-1560	PCM1701
DENON DCD-1650R	PCM1702
DENON DCD-1800	PCM53
DENON DCD-2560	4x AD1862
DENON DCD-2700	4x PCM1702J
DENON DCD-S10/3000	PCM1702J
DENON DCD-3300	PCM56P-K
DENON DCD-3520	PCM64
DENON DCD-3560	PCM58P-K
DENON DCD-S1	PCM1702
DENON DCM-280	PCM1748
DENON RCD-100	PCM1710
DENON UCD-F10	PCM61
DIORA CD-502	TDA1543
DUAL CD130	CX20017
DUAL CD20	PCM53
EXPOSURE CD	TDA1545A
EZO FOG STAGE3	AD1853
FISCHER AD935	LC7881
FISCHER Z1	PCM58
GRUNDIG CD103	LC7881
GRUNDIG CD9000	TDA1541A
GRUNDIG FINE ARTS CD1	SAA7314GP
HARMAN KARDON HD200	YM3020
HARMAN KARDON HD500	PCM53
HARMAN KARDON HD710	MN6474
HARMAN KARDON HD720	PCM1710
HARMAN KARDON HD730	SAA7350
HARMAN KARDON HD740	PCM1702U
HARMAN KARDON HD750	PCM1732
HARMAN KARDON HD760	PCM1702
HARMAN KARDON HD7225	MN6474
HARMAN KARDON HD7300	PCM61

HARMAN KARDON HD7325	MN6474
HARMAN KARDON HD7525	PCM61P
HELIOS MODEL1S	CS4328 (36 bit, ETNA)
HELIOS MODEL2S	CS4328 (36 bit, ETNA)
HELIOS MODEL3S	CS4328 (36 bit, ETNA)
HELIOS STARGATE	CS4328 (36 bit, ETNA)
HEYBROOK SIGNATURE	PCM67
HIGH TECH GOLDFINE CX904	YM3020
JOLIDA JD-100A	PCM1716E
JVC XL V3	PCM53JP
JVC XL V22	PCM54
JVC XL V221	LC7881
JVC XL V250BK	PCM56
JVC XL V300B	PCM53JP
JVC XL V311BK	MN6471
JVC XL V464	MN35500
JVC XL V1100	PCM54
KENWOOD DP47	TD6720N
KENWOOD DP460	TD6709N
KENWOOD DP850	CX20152
KENWOOD DP-880SG	PCM56P
KENWOOD DP1080	LC78620E
KENWOOD DP1100D	CX20152
KENWOOD DP1510	PCM56
KENWOOD DP2000	CX20152
KENWOOD DP2010	PCM56P
KENWOOD DP2080	LC78620E (LC78820)
KENWOOD DP3080	SM5864
KENWOOD DP4090	KAN03
KENWOOD DP5020	PCM1701P
KENWOOD DP5090	MN35502 JVC
KENWOOD DP7002	PCM1702
KENWOOD DP7020	PCM1701P
KENWOOD DP7030	CXD2552
KENWOOD DP7060	TDA1547
KENWOOD DP7090	8x PCM1702
KOREA CHINA CD 022	KDA0316LN
KOREA HCD 630	Y3015
KRELL KAV280	PCM1704

LINN GENKI	PCM1723
LUXMAN D 102	TD6709N
LUXMAN D 103	PCM1701
LUXMAN D 112	1x PCM56 (S/H)
LUXMAN D2 92	LC7881
LUXMAN D 373	AD1864N-J
MARANTZ CD7	TDA1541A S2 (double crown)
MARANTZ CD10	TDA1547
MARANTZ CD11LE	TDA1547
MARANTZ CD11mkII	TDA1547
MARANTZ CD14	TDA1547
MARANTZ CD15	TDA1547
MARANTZ CD16D	TDA1547
MARANTZ CD17mkII	TDA1547
MARANTZ CD17mkIII	PCM1716E
MARANTZ CD19	SM5872
MARANTZ CD34	TDA1540
MARANTZ CD38	TDA1545
MARANTZ CD40	TDA1541A
MARANTZ CD42	SAA7350
MARANTZ CD43	SM5872BS
MARANTZ CD45	TDA1540
MARANTZ CD48	TDA1549
MARANTZ CD50	TDA1541A
MARANTZ CD52	SAA7321GP
MARANTZ CD52SE	SAA7350
MARANTZ CD53	SM5872BS
MARANTZ CD54	TDA1540
MARANTZ CD56	TDA1541
MARANTZ CD60	TDA1541A
MARANTZ CD63	SM5872BS
MARANTZ CD63mkII	SM5872
MARANTZ CD63mkII KI	SM5872
MARANTZ CD63SE	SM5872BS
MARANTZ CD65	TDA1541
MARANTZ CD65mkII	TDA1541A
MARANTZ CD67	SM5872
MARANTZ CD67SE	SM5872
MARANTZ CD67mkII OSE	SM5872

MARANTZ CD72	SAA7350
MARANTZ CD72mkII SE	TDA1547
MARANTZ CD73	2x TDA1540
MARANTZ CD74	2x TDA1540
MARANTZ CD75mkII	TDA1541A
MARANTZ CD80	TDA1541
MARANTZ CD84	TDA1540
MARANTZ CD85	TDA1541
MARANTZ CD94	TDA1541A
MARANTZ CD94mkII	2x TDA1541A S1 (single crown)
MARANTZ CD95	TDA1541A S1 (single crown)
MARANTZ CD99SE	TDA1541A S1 (single crown)
MARANTZ CD273	TDA1541
MARANTZ CD273SE	TDA1541A S1 (single crown)
MARANTZ CD-650	TDA1541A S1 (single crown)
MARANTZ CD4000	TDA1545
MARANTZ CD5000	TDA1549
MARANTZ CD6000	SM5872
MARANTZ CD6000KI	SM5872
MARANTZ CD6000OSE	2x SM5872
MARANTZ CDA94	TDA1541
MARK LEVINSON No. 36	PCM1702 (vagy PCM1704)
MARK LEVINSON No. 390S	AD1853
MERACUS TANTO	CS4327KS
MERIDIAN 208	2x SAA7321
MERIDIAN 508	CS4329
MICROMEGA LEADER	SAA7321GP
MICROMEGA LOGIC	SAA7321
MICROMEGA PREMIUM18	CS4327
MICROMEGA STAGE2	SAA7321GP
MICROMEGA STAGE6	TDA1305
MISSION dAC5	TDA1547
MISSION dAD3	TDA1305
MISSION PCM4000	TDA1541
MINIBISHI DP109	PCM56
MINIBISHI MC5100	PCM56
MUSICAL FIDELITY A2	YDC103
MUSICAL FIDELITY DIGILOG	TDA1541
MUSICAL FIDELITY E60	YDC103

MUSICAL FIDELITY E624	PCM1716
MUSICAL FIDELITY Tri-Vista	PCM1738
MUSICAL FIDELITY X-Ray	PCM1716
MYRYAD T-10	CS4327
MYRYAD T-20	CS4327
MYRYAD MC100	CXD2565
NAD 502	MN6474AM
NAD 510	SAA7350
NAD 512	MN6474
NAD 522	PCM1710
NAD C541i	PCM1710
NAD 5100	PCM56
NAD 5325	LC7881
NAD 5425	MN6471M
NAD C520	PCM1710
NAD S500	CS4390
NAIM AUDIO CD1	TDA1541
NAIM AUDIO CD2	TDA1541
NAIM AUDIO CD3	TDA1541
NAIM AUDIO CD3.5	TDA1305
NAIM AUDIO CD5	TDA1305
NAIM AUDIO CDI	TDA1541A S1 (single crown)
NAIM AUDIO CDS11	PCM1702K
NAKAMICHI CD PLAYER 1	PCM1700P
NAKAMICHI CD PLAYER 4	AD1864N
NAKAMICHI MB 4	LC78840
NAKAMICHI MB 5	LC78840
NAKAMICHI CDP 2E	TDA1541A
NAKAMICHI OMS 1E	PCM56
NAKAMICHI OMS 4E	PCM54
NAKAMICHI OMS 5E	TDA1540
NAKAMICHI OMS 7E	TDA1540
NAKAMICHI OMS 7E II	TDA1541
NEC CD610	PCM54
ONKYO C-1E Integra	2x TDA1547
ONKYO DX-200	CX20152
ONKYO DX-704	MN6472 (Technics MASH)
ONKYO DX-6430	YM3020
ONKYO DX-6470	PCM56



ONKYO DX-6550 Integra	TC9219 (ONKYO 8D-3170-1)
ONKYO DX-6570	PCM58
ONKYO DX-6620	LC7881
ONKYO DX-6850 Integra	2x SM5861
ONKYO DX-7011	TC9237
ONKYO DX-7211	SM5874
ONKYO DX-7222	TC9268P
ONKYO DX-7333	TC9268P
ONKYO DX-7500	ONKYO 8S-3380-1
ONKYO DX-7711 Integra	2x SM5864AP
ONKYO DX-7911 Integra	2x SM5864AP
ORELLE CD100	TDA1541
PARASOUND CD M839	PCM56
PARASOUND C/DP1000	PCM67
PHILIPS CD-80	TDA1541
PHILIPS CD-85M	TDA1541
PHILIPS CD-94M	TDA1541
PHILIPS CD-100	TDA1540
PHILIPS CD-101	TDA1540
PHILIPS CD-104	TDA1540
PHILIPS CD-200	TDA1540
PHILIPS CD-202	TDA1540
PHILIPS CD-204	TDA1540
PHILIPS CD-210	TDA1543
PHILIPS CD-300	2x TDA1540
PHILIPS CD-303	2x TDA1540
PHILIPS CD-304	TDA1540
PHILIPS CD-304 MkII	TDA1541
PHILIPS CD-350	2x TDA1540
PHILIPS CD-371	TDA1541
PHILIPS CD-380	TDA1543
PHILIPS CD-460	TDA1541
PHILIPS CD-465	TDA1541
PHILIPS CD-471	TDA1541
PHILIPS CD-472	TDA1541A
PHILIPS CD-473	TDA1541
PHILIPS CD-480	TDA1543
PHILIPS CD-482	TDA1543
PHILIPS CD-581	TDA1541

PHILIPS CD-582	TDA1541
PHILIPS CD-604	TDA1543
PHILIPS CD-610	TDA1543
PHILIPS CD-614	TDA1543
PHILIPS CD-615	TDA1543
PHILIPS CD-620	TDA1541
PHILIPS CD-624	SAA7323
PHILIPS CD-630	TDA1541
PHILIPS CD-634	SAA7321
PHILIPS CD-640	TDA1541
PHILIPS CD-650	TDA1541
PHILIPS CD-670	TDA1541
PHILIPS CD-721	TDA1545A
PHILIPS CD-723	TDA1545
PHILIPS CD-750	SAA7350 (vagy TDA1549)
PHILIPS CD-751	TDA1549
PHILIPS CD-753	TDA1549
PHILIPS CD-782	TDA1541
PHILIPS CD-820	TDA1541A
PHILIPS CD-824	SAA7321GP
PHILIPS CD-850	TDA1541
PHILIPS CD-880	TDA1541A S1 (single crown)
PHILIPS CD-910	SAA7341GP
PHILIPS CD-911	SAA7341GP
PHILIPS CD-930	SAA7350
PHILIPS CD-931	SAA7350
PHILIPS CD-940	SAA7350S
PHILIPS CD-950	TDA1547
PHILIPS CD-951	TDA1547
PHILIPS CD-960	TDA1541
PHILIPS CDC-486 (6 disc)	TDA1543
PHILIPS CDR-950	AD1855
PHILIPS DAC-960	TDA1541A
PHILIPS LHH-100	TDA1547
PHILIPS LHH-500	TDA1547
PHILIPS LHH-600	TDA1547
PHILIPS LHH-800	TDA1547
PHILIPS LHH-1000	TDA1541
PHILIPS MAGNAVOX CDB-560	TDA1541

PHILIPS MAGNAVOX CDB-650	TDA1541
PINK TRIANGLE NUMERAL	TDA1305T
PIONEER DV-717	PE8001A
PIONEER PD-52	PD2028
PIONEER PD-75	PD2028A (vagy PD2028B)
PIONEER PD-77	PD2028B
PIONEER PD-93	PD2028A
PIONEER PD-95	PD2028A (vagy PD2028B)
PIONEER PD-204	PD2026B
PIONEER PD-4500	PCM1700
PIONEER PD-4550	PCM1700P
PIONEER PD-5100	PD0034
PIONEER PD-5300	PCM56
PIONEER PD-5700	PD2026A
PIONEER PD-7300	PCM58P
PIONEER PD-7700	PD2026A
PIONEER PD-8500	PCM63P
PIONEER PD-9300	PCM58
PIONEER PD-9700	PD2028A
PIONEER PDR-04	AKM4321
PIONEER PDR-609	PCM1716
PIONEER PDR-W739	PCM1716
PIONEER PDR-W839	PCM1716
PIONEER PD-S06	PCM1702J
PIONEER PD-S501	PD2026A
PIONEER PD-S502	PD2026B
PIONEER PD-S505	PD2029A
PIONEER PD-S507	PE8001A
PIONEER PD-S605	PD2029A
PIONEER PD-S703	PD2029A
PIONEER PD-S707	PE8001A
PIONEER PD-S801	PD2028
PIONEER PD-S802	PD2028B
PIONEER PD-S901	PD2028B
PIONEER PD-S904	PD2028B
PRIMARE CD31	4x PCM1704K
PRIMARE D20	AKM4324
PRIMARE D302	4x PCM1702
PROCEED PCD2	PCM58P

PROTON AC423	LC78820
PROTON AC424	TDA1311A
QUAD66	TDA1541A
QUAD77	CS4328
REGA PLANET	PCM1710U
REVOX B225	TDA1540
REVOX B226	TDA1541
REVOX C221	SAA7310
ROKSAN ATTESSA DP3P	CS4328
ROKSAN CASPIAN	TDA1305
ROTEL RCD-02	PCM1732
ROTEL DCM-9PRO	PCM63
ROTEL RCD-855	TDA1541
ROTEL RCD-856BX	SAA7323
ROTEL RCD-865BX	SAA7323
ROTEL RCD-870	TDA1540
ROTEL RCD-945AX	SAA7341GP T
ROTEL RCD-955AX	TDA1541A
ROTEL RCD-955	TDA1541
ROTEL RCD-961	PCM1732U
ROTEL RCD-965BX	SAA7323GP T
ROTEL RCD-970BX	TDA1305T
ROTEL RCD-971	PCM63
ROTEL RCD-975	TDA1305T
ROTEL RCD-991	PCM63P
ROTEL RCD-1070	PCM1732
SANSUI CD V1000	PCM56
SANYO CP489	LC7881
SEG CD200	YM3020
SHANLING CD-T80	PCM1738E
SHANLING CD-T80UK	PCM1738E
SHARP DX112	IR 3K16BM
SHARP DX650	LC7880
SHERWOOD CD1	TDA1547
SHERWOOD CD1060C	D6372 CX
SHERWOOD CD1160R	PCM56
SHERWOOD CD1192R	YM4113B
SHERWOOD CDC2000C	μPD6376
SHERWOOD CDC2010RC	μPD6376

SHERWOOD CD4030R	SAA7350BS
SIMAUDIO MOON ECLIPSE	4x PCM1704K
SONIC FRONTIERS SFCD1	UltraAnalog D20400A
SONY CDP-40	1x PCM54 (S/H)
SONY CDP-101	CX20017
SONY CDP-222ES	PCM56P J
SONY CDP-222ESD	1x TDA1541
SONY CDP-227ESD	TDA1541
SONY CDP-228ESD	PCM58P
SONY CDP-302ES	CX20152
SONY CDP-303ESII	CX20152
SONY CDP-313	CXD2565M
SONY CDP-315	CXD2565M
SONY CDP-333ESA	CXD2562
SONY CDP-333ESD	TDA1541
SONY CDP-333ESJ	CXD2562
SONY CDP-337ESD	TDA1541
SONY CDP-338ESD	2x PCM58P
SONY CDP-497	CXD2561
SONY CDP-501ES	CX20017
SONY CDP-502	PCM54
SONY CDP-502ES	CX20152
SONY CDP-502ESII	PCM53JP-V
SONY CDP-520ESII	CX20152
SONY CDP-552	PCM54
SONY CDP-552ESD	CX20152
SONY CDP-553ESD	PCM53JP-V K
SONY CDP-555ESA	CXD2562
SONY CDP-555ESD	TDA1541A
SONY CDP-555ESJ	CXD2562
SONY CDP-557ESD	PCM58P
SONY CDP-620	PCM54
SONY CDP-650	PCM54
SONY CDP-701ES	CX20017
SONY CDP-707ESD	PCM58P
SONY CDP-770	PCM56P
SONY CDP-777ESA	CXD2562Q
SONY CDP-M95	TDA1541
SONY CDP-MS1	CXD8594 + CXA8042AS

SONY CDP-R3 + DAS-R1a	CXD2552Q + CXD2552
SONY CDP-X229ES	CXD2562Q
SONY CDP-X3000	CXD2562Q + CXA8042AS
SONY CDP-X303ES	CXD2562Q
SONY CDP-X5000	CXD2562 + CXA8042
SONY CDP-X505ES	CXD2562Q
SONY CDP-X33ES	CXD2552Q
SONY CDP-X55ES	CXD2552
SONY CDP-X777ES	CXD2552BQ
SONY CDP-X779ES	CXD2562
SONY CDP-X77ES	CXD2552
SONY CDP-X7ESD	PCM58P S
SONY CDP-X900	CXA8042
SONY CDP-XA20ES	CXD8505BQ + CXA8042AS
SONY CDP-XA30ES	CXD2562Q + CXA8042AS
SONY CDP-XA50ES	CXA8042AS
SONY CDP-XA55ES	CXD8594Q + CXA8042S
SONY CDP-XA5ES	CXD2562Q + CXA8042AS
SONY CDP-XA7ES	CXD2562 + CXA8042AS
SONY CDP-XB920	CXD8715 + CXA8355
SONY CDP-XB720E	CXD8735N
SONY CDP-XB930	CXD8735N
SONY CDP-XE300	CXD8567
SONY CDP-XE310	CXD8567
SONY CDP-XE330	CXD2529Q
SONY CDP-XE900	CXD8505 + CXA8055
SONY CHC-P11 (mini hifi)	PCM1710U
SONY DAS-R1	2x TDA1541A S1 (single crown)
SONY PLAYSTATION SCPH-1002	AKM AK4310VM or AK4310AVM (late)
SONY PLAYSTATION SCPH-5502	AKM AK4310AVM
SONY PLAYSTATION SCPH-5552	AKM AK4310AVM
SOUND WAVE CD1100	LC7881
SUDGEN OPTIMA	TDA1543
SUDGEN SDA-1	TDA1541
SUDGEN SDT-1	TDA1541A S1 (single crown)
T+A CD1210R	SM5864AP
TAG McLAREN CD20R	CS4329
TALK ELECTRONICS THUNDER 3	CS4390
TASCAM CD201	MN6474

TEAC CPD3450SE	YDC103
TEAC PD155mk2	Y3015
TEAC PD160	TC9218F
TEAC PD365	YM7121B
TEAC VRDS 7	SAA7350
TEAC VRDS 8	PCM1702
TEAC VRDS 9	PCM1702
TEAC VRDS 10SE	TDA1547
TEAC VRDS 25	AD1862J
TEAC ZD5000	PCM53
TECHNICS SL-P1	PCM53
TECHNICS SL-P2	PCM53
TECHNICS SL-P50	MN6474
TECHNICS SL-P110	PCM54HP
TECHNICS SL-P120K E	PCM54HP
TECHNICS SL-P272A	MN6474
TECHNICS SL-P520	MN6618A
TECHNICS SL-P555	MN6471
TECHNICS SL-P720	MN6618A
TECHNICS SL-P770	2x PCM56P + 2x PCM56P-J
TECHNICS SL-P990	4x PCM56P-J
TECHNICS SL-P999	4x PCM56P-J
TECHNICS SL-P1200	PCM54HP
TECHNICS SL-PG480A	MN662713
TECHNICS SL-PJ28A	MN6477
TECHNICS SL-PS670D	MN6474
TECHNICS SL-PS700	MN6474
TECHNICS SL-PS770A	MN64733
THETA DSP	PCM67
THOMSON LAD300	TD6720N
THULE CD100	CS4303
THULE SPIRIT	PCM1715U
TOSHIBA XR40	TD6705AP
UHER UCD-210	LC7882
UNIVERSUM CD4682	PCM56
USHER CD-100	PCM1732
WADIA 23	AD1865
WADIA 850	PCM1702
WADIA 860	4x PCM1702

WADIA 861	4x PCM1704
YAMAHA CD-2	PCM53
YAMAHA CD-3	PCM53
YAMAHA CD-2000	PCM54HP
YAMAHA CDX-3	PCM54
YAMAHA CDX-410	PCM56
YAMAHA CDX-420	PCM56
YAMAHA CDX-470	YDC103
YAMAHA CDX-480	MN66271
YAMAHA CDX-490	MN66271R
YAMAHA CDX-580	YAC514
YAMAHA CDX-590	YAC514
YAMAHA CDX-593	YAC514
YAMAHA CDX-700	PCM56
YAMAHA CDX-810	2x PCM56J
YAMAHA CDX-880	YAC514
YAMAHA CDX-890	YAC514
YAMAHA CDX-893	YAC514
YAMAHA CDX-900	PCM56
YAMAHA CDX-993	YAC514F
YAMAHA CDX-1100	PCM56
YAMAHA CDX-2020	PCM58