


Configurations Jackson II

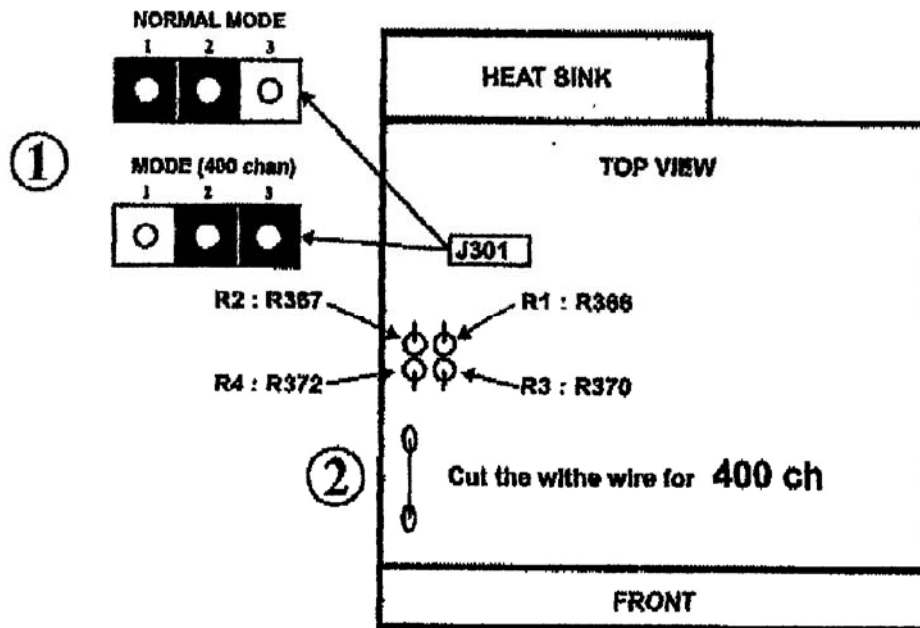

Modifications 400 channels:

- (1) Jumper position 2 + 3
- (2) Cut the white wire

Changing band

- Switch **F/OFF** on position **F**
- Changing band with rotary switch
- Confirm band: switch **F/OFF** on position **OFF**

Functions OFF/DIM (Dimmer)

- 1 - Back light Brightness
 - Normal brightness: Switch on the radio while **OFF/DIM** slide switch set to **OFF**.
 - Dimmed brightness: Switch on the radio while **OFF/DIM** slide switch set to **DIM**

Afterwards **OFF/DIM** slide switch functions as =10KHz frequency shift

- 2 - Frequency shift +10KHz
 - Change to +10KHz: slide **OFF/DIM** to **DIM**
 - Cancel to +10KHz: slide **OFF/DIM** to **OFF**